




# RHINO-RACK

**CONTROLLED**

NOTE: Not compatible with Master Fit Roof Box

## 43232B - Pioneer Accessory Attachment Small Bar

**Important:** Please read these instructions carefully prior to installation.  
Please refer to your fitting instruction to ensure that the alloy tray is installed correctly.  
Check the contents of this kit before commencing fitment and report any discrepancies.

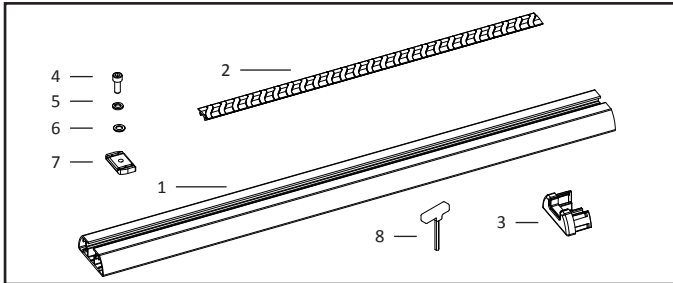

Item	Component	Qty	Part No.
1	Small Accessory Bar 610mm	2	A807
2	Vortex Strip	4	M626
3	End Cap	4	M710
4	M6x16 Socket Head Bolt	6	B031
5	M6 Spring Washer	6	W004
6	M6 Flat Washer	6	W003
7	M6 Channel Nut	6	N002
8	5mm Allen Key	1	SECKEY-S
10	Fitting Instructions	1	R1095

**1** Skip to step 4 if you know the part number of the tray or will not be mounting it to the outer side plank.

**2** Assemble the hardware on just the slot of the bar. Finger tighten. Push the end caps in both ends.

**3** Slide the bar into the tray by gliding the channel nut inside the c-channel. Adjust the bar to the left or right until each channels from the tray aligns with a hole in the bar. Take note of the hole positions.

**4** If the bar is on the tray, slide it back out. Assemble the hardware with the noted holes from step 3 or if you know the part number of the tray follow the guide below.

**Outer side Mount**

**Inner Plank Mount**

**Hardware Setup**

**5** Slide the bar into the tray along with the channel nut inside the c-channel. Tighten and add in vortex strip.

**6** Repeat steps 1-5 for the other accessory bar.

Rhino-Rack  
3 Pike Street, Rydalmere,  
NSW 2116, Australia.  
(Ph) (02) 9638 4744  
(Fax) (02) 9638 4822

Document No: R1095  
Prepared By: Peter Luu  
Authorised By: Chris Murty  
Issue No: 02  
Issue Date: 30/01/2017

These instructions remain the property of Rhino-Rack Australia Pty Ltd and may not be used or changed for any other purpose than intended.